

# Trimless Adjustable 5679, 5680, 5681

■ astro

**GB**

Please read the instructions carefully before commencing assembly

Live : Normally Brown / Red  
Neutral : Normally Blue / Black  
Earth : Normally Green / Yellow

**E**

Leer atentamente las instrucciones antes de comenzar el montaje

Fase : Normalmente Marrón / Rojo  
Neutro : Normalmente Azul / Negro  
Tierra : Normalmente Verde / Amarillo

**F**

Lire attentivement les instructions avant de commencer le montage

Phase : Normalement Brun / Rouge  
Neutre : Normalement Bleu / Noir  
Terre : Normalement Vert / Jaune

**D**

Lesen Sie bitte die Anweisungen sorgfältig durch, bevor Sie mit dem Zusammenbauen beginnen

Phase : Normalerweise Braun / Rot  
Nulleiter : Normalerweise Blau / Schwarz  
Erde : Normalerweise Grün / Gelb


For ceiling use only.  
Seulement pour montage au plafond.  
Nur für den Deckengebrauch.  
Para utilizar sólo en techos.




Not suitable for mounting **in** flammable materials, e.g. wood.  
Nicht für das Anbringen **in** flammbaren Material geeignet.  
Ne convient pas pour montage **dans** des matériaux inflammables.  
No apto para el montaje **dentro** de materiales inflamables.




Not suitable for covering with thermal insulation.  
Nicht für die Abdeckung mit Wärmedämmung geeignet.  
Ne peut être recouvert de matériaux d'isolation.  
No apto para cubiertas con aislamiento térmico.

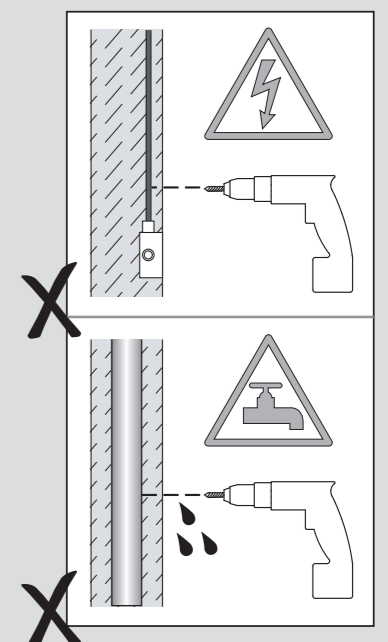


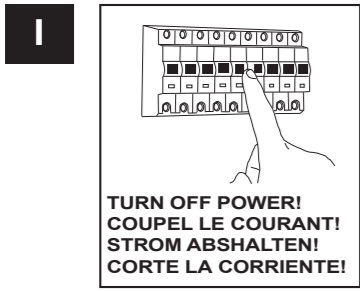

**2** 5679 Trimless Adjustable Round

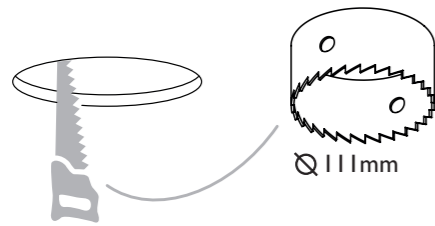

5680 Trimless Adjustable Square

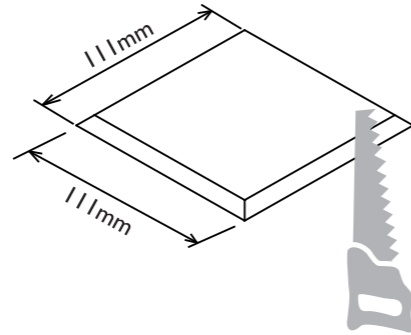

5681 Trimless Adjustable Twin

